OWNER'S MANUAL / SAFETY INSTRUCTIONS / COMPLIANCE INFORMATION

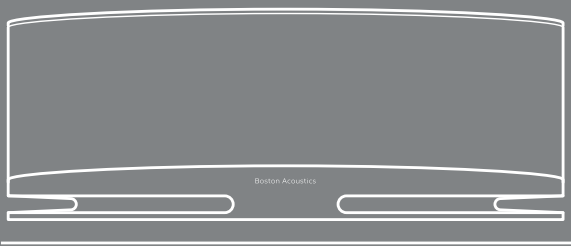

MC100 Blue

Bluetooth® Wireless Speaker System

Français

Système de haut-parleurs sans fil Bluetooth[MD]

MANUEL DE L'UTILISATEUR / INSTRUCTIONS DE SÉCURITÉ / INFORMATIONS SUR LA CONFORMITÉ

Español

Sistema de altavoces inalámbricos por Bluetooth®

MANUAL DEL PROPIETARIO/INSTRUCCIONES DE SEGURIDAD /INFORMACIÓN DE CUMPLIMIENTO

Boston Acoustics®

FCC Information (For US customers)

1. COMPLIANCE INFORMATION
This equipment complies with Part 15 of the FCC Rules. Operation is subject to the two following conditions:
(1) this product may not cause harmful interference, and
(2) this product must accept any interference received, including interference that may cause undesired operation.

FCCID:XN6-MC100BLUE

Boston Acoustics
7 Constitution Way, Woburn, MA 01801 USA
Tel. 978-538-5000

2. IMPORTANT NOTICE: DO NOT MODIFY THIS PRODUCT
This product, when installed as indicated in the instructions contained in this manual, meets FCC requirements. Modification not expressly approved by Boston Acoustics may void your authority, granted by the FCC, to use the product.

3. CAUTION
- To comply with FCC RF exposure compliance requirement, separation distance of at least 20 cm must be maintained between the antenna of this product and all persons.
- This product and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.

4. NOTE
This product has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. The limits are designed to provide reasonable protection against harmful interference in a residential installation.

This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment OFF and ON, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio or television technician for help.

IC Information (For Canadian customers)

1. PRODUCT
This product contains IC 8819A-MC100BLUE.
This Class B digital apparatus complies with Canadian ICES-003.

2. CAUTION
To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that permitted for successful communication.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :
(1) l'appareil ne doit pas produire de brouillage, et
(2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Informations sur IC (pour les clients canadiens)

1. APPAREIL
Cet appareil contiens IC 8819A-MC100BLUE.
Cet appareil numérique de las classe B est conforme à la norme NMB-003 du Canada.

2. ATTENTION
Afin de réduire le risque d´interférence aux autres utilisateurs, il faut choisir le type d´antenne et son gain de façon à ce que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne soit pas supérieure au niveau requis pour l´obtention d´une communication satisfaisante.

Designed in USA
Made in China
Boston Acoustics, Inc., USA

IMPORTANT SAFETY INSTRUCTIONS

This symbol found on the apparatus indicates hazards arising from dangerous voltages.

This symbol found on the apparatus indicates the user should read all safety statements found in the user manual.

This symbol found on the apparatus indicates double insulation.

Warning!
To reduce the risk of fire or electrical shock, do not expose this apparatus to rain or moisture.

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Unplug this apparatus during lightning storms or when unused for long periods of time.
13. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
14. Maintain a minimum distance of 2" (50mm) around the front, rear, and sides of the apparatus for sufficient ventilation. The ventilation should not be impeded by covering the ventilation openings or placing on or around the apparatus items such as newspapers, table-cloths, curtains, etc.
15. No open flame sources, such as lighted candles, should be placed on the apparatus.
16. The apparatus shall not be exposed to dripping or splashing. No objects filled with liquids, such as vases, shall be placed on the apparatus.
17. Either the power inlet connector on the rear of the apparatus or the power plug at the wall must remain accessible, to be able to disconnect power from the apparatus.
18. To completely disconnect this apparatus from the AC Mains, disconnect the power supply cord plug from the AC receptacle.
19. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

20. CAUTION: These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.
21. WARNING: Only use attachments/accessories specified or provided by the manufacturer
22. WARNING: Please refer the information on exterior bottom enclosure for electrical and safety information before installing or operating the apparatus.
23. When not in use and during movement, please take care of the power cordset, e.g. tie up the power cordset with cable tie or something like that. It shall be free from sharp edges that can cause abrasion of the power cordset. When put into use again, please make sure the power cordset is not damaged, If any damage is found, please contact customer service and replace the power cordset.

24. Warning: To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.
25. Observe and follow local regulations regarding battery disposal. Do not keep the battery in a place exposed to direct sunlight or in places with extremely high temperatures, such as near a heater.

WARNING:

DO NOT INGEST BATTERY, CHEMICAL BURN HAZARD

- The remote control supplied with this product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause internal burns in just 2 hours and can lead to death.
- Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate Medical attention.
- Observe and follow local regulations regarding battery disposal.
- Do not keep the battery in a place exposed to direct sunlight or in places with extremely high temperatures, such as near a heater.

American Users:

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.

Caution: Unauthorized changes or modifications to the receiver could void the user s authority to operate the equipment.

Canadian Users:

This class B digital apparatus complies with CAN ICES-3(B). Cet appareil numérique de classe B est conforme á la norme NMB-3(B) du Canada.

FCC Radiation Exposure Statement
1)This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

Caution!
Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
2)the IC statement of the user manual is not correct, attached the correct IC statement for your reference. please update the user manual.

Canada
The device meets the exemption from the routine evaluation limits in section 2.5 of RSS 102 and compliance with RSS-102 RF exposure, users can obtain Canadian information on RF exposure and compliance.

Le dispositif rencontre l'exemption des limites courantes d'évaluation dans la section 2.5 de RSS 102 et la conformité à l'exposition de RSS-102 rf, utilisateurs peut obtenir l'information canadienne sur l'exposition et la conformité de rf.

Introduction

Thank you for choosing Boston Acoustics® and congratulations on your purchase of the MC100 Blue wireless speaker system. The MC100 Blue is a self-amplified stereo speaker system that uses Bluetooth® wireless communication to receive a signal from any standard Bluetooth equipped device capable of stereo audio transmission (A2DP).

Using the simple controls on the MC100 Blue, and its remote control, you can adjust the volume of the system or operate the basic music play back functions of your connected devices. An auxiliary analog input also allows you to connect any music source that has a standard 3.5mm connector to the MC100 Blue. We hope you'll enjoy it for years to come.

Features

- Outstanding stereo performance from dual high-performance Boston-designed 3½ inch speakers in separate acoustic chambers, vented for extended bass response
- Bluetooth wireless streaming from any compatible Bluetooth music player, phone, tablet or computer
- Tap-to-pair functionality for instant connection with any device that supports Near Field Communication (NFC)
- AptX codec for CD-like sound quality over Bluetooth
- Auxiliary input
- BassTrac® audio processing for satisfying bass at any volume
- Easy-to-use controls
- Volume level display behind grille
- Remote control with music playback controls
- Headphone output
- Elegant styling with beautiful high-gloss finish

Unpacking and Setting Up Your MC100 Blue

Carefully unpack the system. If there is any sign of damage from transit, report it immediately to your dealer and/or delivery service. Keep the shipping carton and packing materials for future use. Be sure to keep your purchase receipt in a safe place, as it may be required for warranty purposes.

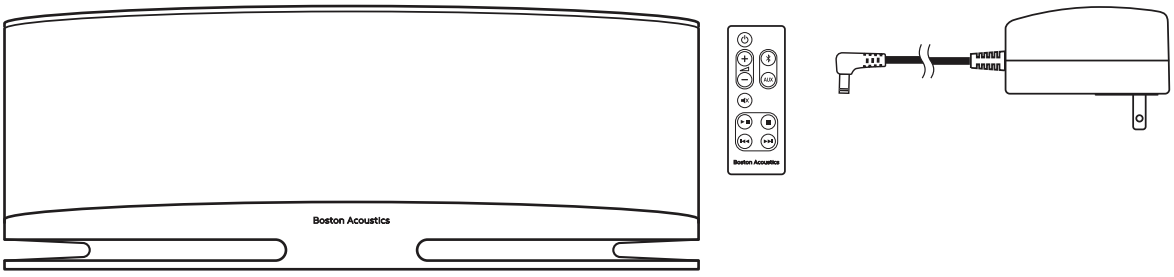

In the carton you should find the MC100Blue, remote control, power supply and a power plug adapter.

Placement

Your MC100 Blue will sound great just about anywhere. If you put it near a wall or corner the bass response will be enhanced. Blocking the bass ports on the rear of the cabinet will reduce bass response.

Power Connection
Attach the power plug adapter plate to the power supply. Plug the power supply into the wall power outlet. Connect the other cable from the power supply to the power input on the back of the unit.

Service Connector
The service port is used for software updates only.

Reset Button
Returns the MC100 Blue settings to the defaults values.

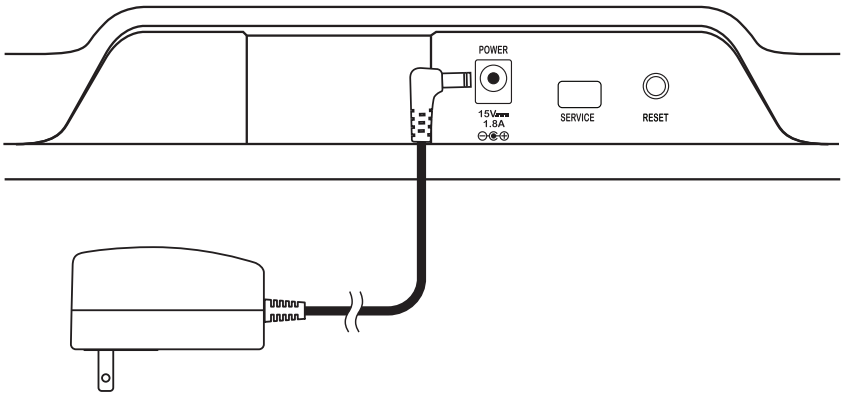

Controls

power – There are three power states.

- **on** - the button is lit blue. The system is powered up.
- **standby** – button is lit red. The system is powered down, but will automatically turn on when a new audio signal appears from a connected device.
- **off** – button is not lit. The system is powered down completely and will not respond to audio signals.

A quick press of the button will toggle between on and standby states. Press and hold the button to turn the system off.

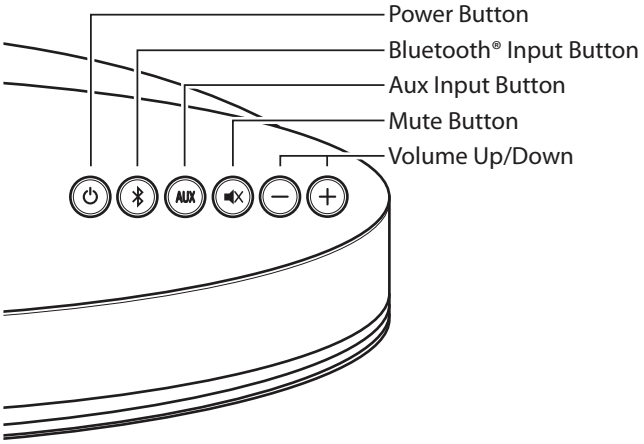

Bluetooth input – Press to select the Bluetooth wireless input. The button blinks rapidly when pairing and stays lit when the system is connected to a Bluetooth device. See the "Bluetooth Details" section of this manual for more information.

auxiliary input – press to select the auxiliary input. The top button lights when the auxiliary input is selected.

muting – to mute the sound or restore it to the previous volume level. When the sound is muted, the button is lit.

volume down – press to reduce volume.

volume up – press to increase volume.

Volume Display

There is a 10-segment volume display on the front behind the grille. The display lights blue when volume adjustments are made. After a few seconds the display turns off. When the system receives a signal from the remote control, the bottom LED flickers.

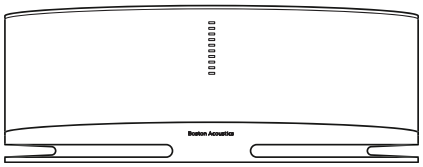

Remote Control

The remote control has the same buttons as are on the top of the system, with the addition of playback control buttons that let you control your compatible Bluetooth devices:

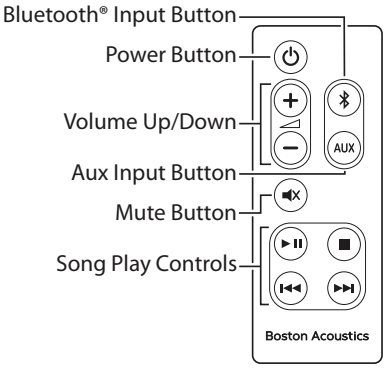

- ►II Play /Pause
- ■ Stop
- ⏮ Skip back / fast reverse
- ⏭ Skip forward / fast forward

Notes About the Remote

When you unpack your remote control there will be a plastic tab extending from the battery compartment. This keeps the battery from being depleted. Pull out this tab before using the remote control. Eventually you'll need to replace the remote battery. When the battery is depleted, the remote won't reliably operate the MC100 Blue. You will need to replace it with a new CR2025 3V lithium coin-type battery, available at many retailers.

When using the remote you should be able to see the MC100 Blue. Point the remote control at the front panel of the system when pressing the buttons. If the MC100 Blue does not respond to the remote, try moving closer to the system. Operating range is specified to be 15 feet, ±30°.

Bluetooth Details

Getting Started – Pairing

Before you can stream Bluetooth audio to your MC100 Blue, you have to pair it to your device.

To pair the MC100 Blue to a device for the first time:

1. Go to Bluetooth settings on your device. Make sure the device's Bluetooth feature is set to "on".

2. Turn on the MC100 Blue by pressing the ⏻ button. The button will light solid blue. The ᛒ button will begin to flash, indicating that the system is searching for a device with which to pair.

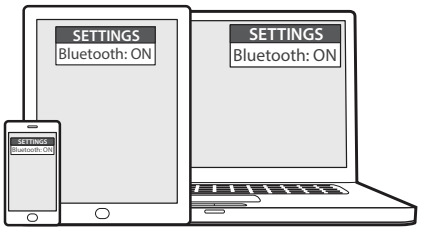

3. The MC100 Blue has two ways to initiate pairing:

NFC (Near Field Communication) or "tap-to-pair". The newest and easiest pairing method. If you have an NFC enabled device, simply place it gently on the top of the MC100 Blue. Your phone or tablet does the rest, and you can be playing audio within seconds.

Press and hold the ᛒ button on the top of the MC100 Blue, or on the remote, for 3 seconds. The ᛒ button on the top will begin to flash blue, indicating that the system is looking for your device.

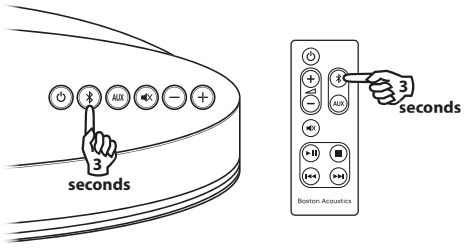

Look at the Bluetooth list on your device. You may have to select "search for devices" for a new device to appear in the list of available devices. Once "Boston MC100Blue" appears in that list, simply select to pair.

When the ᛒ button on top lights solid blue, you are ready to go! Fire up your music and enjoy!

Once the MC100 Blue is paired to a device, its Bluetooth address is stored in a 'Paired List' so it can hook up to that device easily in the future. The MC100 Blue is capable of storing up to 8 different devices. Once that limit is exceeded, the oldest device is cleared so that a new one can be stored.

After the first pairing, the MC100 Blue will automatically connect to your device when it is in range. The ᛒ button on top of the MC100 Blue will light solid blue to indicate the system is ready to stream music from your connected device. If a song is already playing through the device, the MC100 Blue will start playing.

Note: If the Bluetooth button is lit, but nothing is heard:

1. Check the device to make sure a selection is playing. Make sure your music is not paused.
2. Check the device and the MC100 Blue to make sure their volume levels are up and MUTE is not enabled on either of them.

The MC100 Blue will stay in pairing mode for up to 5 minutes, searching for a Bluetooth device (which must also be in pairing mode). If it does not find a device, the Bluetooth button will light red to indicate that it was not able to pair. To try pairing again, press and release the **RESET** button on the back of the MC100 Blue. The ᛒ button will begin to flash, indicating that the system is searching for a device with which to pair. If you are still having trouble, try moving the device closer to the MC100 Blue and repeat the pairing process.

Connecting Headphones

Connect the headphone plug to the 3.5mm jack beside the 🎧 symbol. This turns off the MC100 Blue internal speakers. If your headphones have a larger 1/4-inch plug you will need an adapter, available at many retailers.

Auxiliary Input

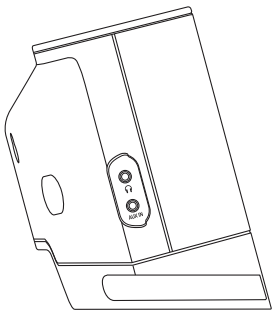

Press the **AUX** button on the top or on the remote control. The **AUX** button on the top will light blue.

The MC100 Blue can accept an analog signal from a wide range of sources—from CD players to MP3 players, and even older legacy devices. You'll need a cable with a standard 3.5mm stereo mini plug to connect between the source and the auxiliary input on the left side of the system.

Note: The analog output signals from some sources can be fairly strong. If the volume level of the source device is turned up too high, it could overload the inputs of the MC100 Blue. This is unlikely to cause damage, but can cause distorted sound. Initially, set the volume of the source to a medium – low level, then turn it up as needed. If you hear distortion, turn down the device's volume control.

Wall Mounting the MC100 Blue

The MC100 Blue can be wall mounted using the keyhole openings on the back of the system. Install two M5 or equivalent screws in the wall. They must be exactly 3 15/16" (100mm) apart, and level with each other. Leave about 3/16" (5mm) of the screw shaft exposed so the head of the screw can engage the keyhole opening. Carefully position the MC100 Blue keyhole openings over the screw head and set it in place. Be sure the cabinet is firmly mounted on the screw heads before you let go of the system.

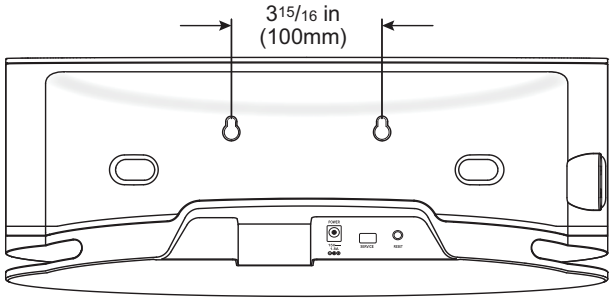

Limited Warranty

Boston Acoustics warrants to the original purchaser of the MC100 Blue that it will be free of defects in materials and workmanship in its mechanical parts for a period of one year from the date of purchase.

Your responsibilities are to install and use the MC100 Blue according to the instructions supplied, to provide safe and secure transportation to an authorized Boston Acoustics service representative, and to present proof of purchase in the form of your sales slip when requesting service.

Excluded from this warranty is damage that results from abuse, misuse, improper installation, accidents, shipping, or repairs/modifications by anyone other than an authorized Boston Acoustics service representative.

This warranty is limited to the Boston Acoustics product and does not cover damage to any associated equipment. This warranty does not cover the cost of removal or reinstallation. This warranty is void if the serial number has been removed or defaced. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

If Service Seems Necessary

First, contact the dealer from whom you purchased the product. If that is not possible, contact us

by e-mail at support@bostona.com
by phone at (877) 924-5817

Or you may write to us at

Boston Acoustics, Inc.
100 Corporate Drive
Mahwah, NJ 07430 USA

We will promptly advise you of what action to take. If it is necessary to send your MC100 Blue to an authorized service center, please ship it prepaid. After it has been repaired, we will return it freight prepaid in the United States and Canada.

Register your product online @ BostonAcoustics.com

Boston Acoustics®

bostonacoustics.com

Boston, Boston Acoustics, BassTrac and the Boston Acoustics logo are registered trademarks of Boston Acoustics, Inc.
Specifications are subject to change without notice. © 2013 Boston Acoustics, Inc.
The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Boston Acoustics is under license. Other trademarks and trade names are those of their respective owners.

142-004362-1
Printed in China

MC100 Blue

Quick Start Guide

Remove contents of box.



Quick Start Guide

Owner's Manual



AC power supply

Remote Control

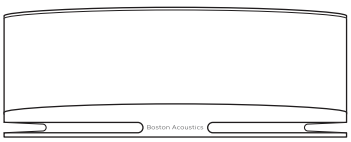

MC100 Blue speaker

---

1 Locate the MC100 Blue near an AC power source and connect.

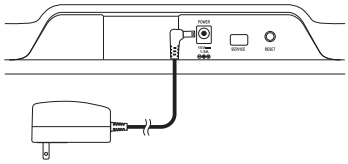

Press the ⏻ button.

---

2 Enable ***Bluetooth®*** on your mobile device.

If necessary, refer to the owner's manual of your mobile device.

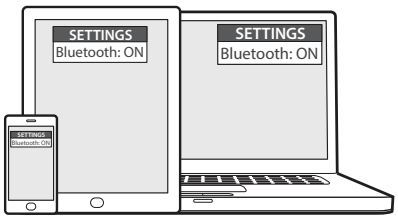

3a Pair your mobile device to the MC100 Blue. Press and hold the ᛒ button for three seconds to launch the pairing process (button flashes rapidly).

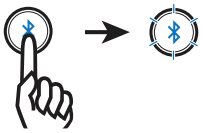

Select "Boston MC100Blue" on the ***Bluetooth*** screen of your mobile device.

When the ᛒ button stops flashing, your mobile device is connected and you can begin streaming audio.

OR,

3b If you have an NFC enabled device, simply place it gently on the top of the MC100 Blue. Your phone or tablet does the rest, and you can be playing audio within seconds.

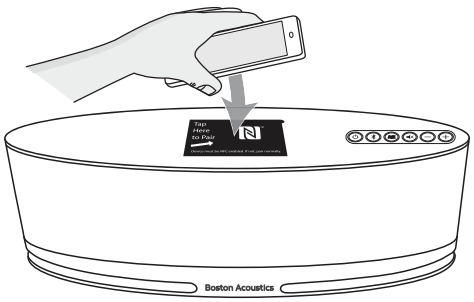

MC100 Blue

Quick Start Guide

Guide de démarrage rapide / Guía de Inicio Rápido

1 Branchez l'alimentation à une priseélectrique murale. Branchez.

Appuyez ⏻ bouton.

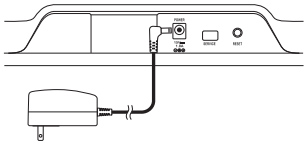

2 Activez la fonction *Bluetooth*® sur votre appareil mobile

Si nécessaire, reportez-vous au manuel du propriétaire de votre appareil mobile.

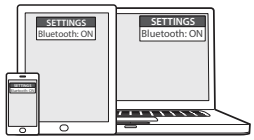

3a Appuyez et maintenez enfoncé le bouton ᛒ sur le dessus du système ou de la télécommande. Le bouton ᛒ clignote pendant le jumelage. Le bouton ᛒ du haut reste allumé pendant que le système est connecté à un appareil *Bluetooth*.

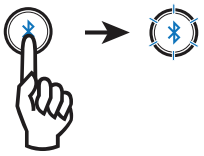

Une fois que vous voyez s'afficher "Boston MC100Blue" dans cette liste, sélectionnez simplement celui-ci pour commencer le jumelage. Lorsque le bouton ᛒ sur le dessus s'allume en bleu, vous êtes prêt à utiliser le système!

Or,

3b Si vous avez un appareil qui est compatible avec la NFC, appuyez simplement sur est compatible avec la NFC, appuyez simplement sur le dessus du MC100Blue. Votre téléphone ou tablette fera le reste et vous pourrez lire des fichiers audio presque instantanément.

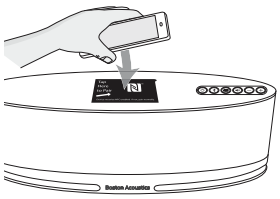

1 Conecte la fuente de alimentación al enchufe de alimentación eléctrica de la pared.

Pulse ⏻ botón.

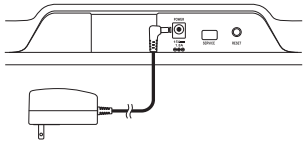

2 Activar *Bluetooth*® en su dispositivo móvil.

Si es necesario, consulte el manual del usuario de su dispositivo móvil.

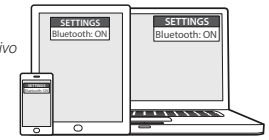

3a Presione ᛒ para seleccionar la entrada inalámbrica de *Bluetooth*. El botón ᛒ parpadea mientras empareja. El botón ᛒ de arriba se queda encendido cuando el sistema está conectado a un dispositivo *Bluetooth*. Presione y sostenga el botón ᛒ de la parte superior o sobre el remoto durante 3 segundos.

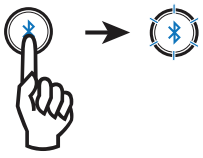

Una vez que aparezca "Boston MC100Blue" en esa lista, simplemente selecciónelo para emparejar. Cuando el botón ᛒ de la parte superior se encienda en azul sólido, ¡estará listo!

Or,

3b Si usted tiene un dispositivo con NFC habilitado, simplemente pulse ligeramente sobre la parte superior del MC100Blue. Su teléfono o tablet harán el resto, usted podrá estar reproduciendo audio en cuestión de segundos.

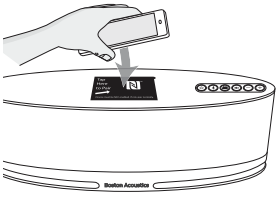

Boston Acoustics®

bostonacoustics.com

Boston and Boston Acoustics are registered trademarks of Boston Acoustics, Inc.
Specifications are subject to change without notice.
© 2013 Boston Acoustics, Inc.
The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc.
Other trademarks and trade names are those of their respective owners.

142-004364-2
Printed in China

Bluetooth® Wireless Speaker System

MC100Blue

English

Troubleshooting note for iPhone4S users:

Apple iPhone 4S running iOS 6 firmware has momentary audio dropouts that occur during playback when the Wi-Fi and Bluetooth are both set to ON. Because this issue is related to a specific version of Apple iPhone and firmware we recommend updating your firmware to iOS 7 and/or setting Wi-Fi to OFF when streaming audio to Bluetooth devices.

If you require further assistance, please contact our Customer Support team at 877-924-5817 Monday through Friday from 9AM to 8PM EST.

Français

Dépannage Note pour les utilisateurs iPhone4S:

Apple iPhone 4S iOS 6 firmware a décrochages audio momentanées qui se produisent pendant la lecture lorsque la connexion Wi-Fi et Bluetooth sont tous deux réglés sur ON. Parce que cette question est liée à une version spécifique de l'iPhone d'Apple et le firmware, nous recommandons la mise à jour de votre firmware iOS à 7 et / ou la mise en Wi-Fi à OFF lors du streaming audio à des périphériques Bluetooth.

Si vous avez besoin d'aide, s'il vous plaît contacter notre équipe de soutien à la clientèle au 877-924-5817 du lundi au vendredi 9am – 8pm.

Español

Solución de problemas de nota para los usuarios de iPhone4S:

IPhone 4S de Apple con iOS 6 firmware tiene pérdidas de sonido momentáneos que ocurren durante la reproducción cuando el Wi-Fi y Bluetooth se establecen en ON. Debido a que este problema está relacionado con una versión específica del iPhone y el firmware de Apple le recomendamos actualizar su firmware para iOS 7 y / o la creación de Wi-Fi en OFF cuando el streaming de audio a dispositivos Bluetooth.

Si necesita más ayuda, póngase en contacto con nuestro equipo de Atención al Cliente al 877-924-5817 de lunes a viernes de 9 a 8 PM.

Boston Acoustics, Inc.
Printed in China 5431 1031 200AD